

Configuring SGMII Ethernet on the PowerQUICC™ MPC8313E Processor

by *Kapil Juneja*
Network Computing Systems Group,
Freescale Semiconductor, Inc.


The serial gigabit media-independent interface (SGMII) is the interface with the lowest pin count available for connecting compatible MACs and PHYs. It consists of pairs of Txdata, Rxdata, and Rx Ref Clk data pins. It can also be used as a serial communication bus between the PowerQUICC™ MPC8313E and other peripherals such as through a backplane. A key advantage of SGMII is that it can operate at multiple speeds of 10/100/1000 Mbps.

This application note describes how to configure SGMII mode on the MPC8313E processor, and it provides example code for a test setup.

Contents

1	Configuring SGMII Mode on the MPC8313E	3
1.1	Selecting eTSEC Mode.	3
1.2	Program the SerDes to Select TBI	3
1.3	Program the External PHY	3
1.4	SGMII Register Initialization Sequence.	3
2	Example of Test Setup and Code.	5
2.1	Code.	5
2.2	Test Setup.	8
3	Conclusion.	8
4	References	8

Figure 1 shows the connection between MPC8313E MAC and PHY with the support of SGMII.

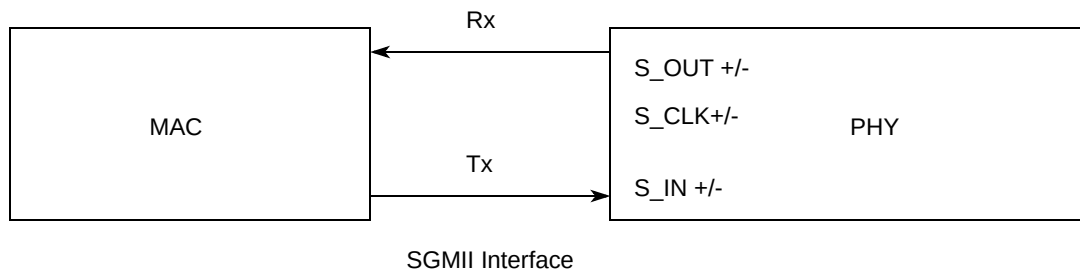

NOTE: The use of RxCLK is optional, and the MPC8313E MAC can extract the clock from the recovered data stream. It is, therefore, shown as unconnected above.

Figure 1. SGMII Connectivity with PHY

SGMII support on the MPC8313E is provided through an internal Serializer-Deserializer (SerDes) PHY that converts the parallel data stream into a serial stream. The eTSEC (enhanced Three Speed Ethernet Controller) is the main ethernet controller on the chip and has provisions for various types of interfaces for connecting to PHY, like MII, RMII, GMII, RGMII, TBI etc. For providing SGMII functionality, connections are provided to the SerDes through the eTSEC's ten-bit interface (TBI). The TBI is controlled through an MDIO (Management Data I/O) interface, just like any MII compatible PHY. To configure the processor to operate in SGMII mode, the TBI must be programmed to connect to the internal SerDes rather than to the external pins. The PHY address corresponding to each TBI can be programmed in the TBIPA_VAL register of the corresponding eTSEC. This address is to be left shifted by 8 and Ored with the MII register address to generate the physical MDIO address on the bus. The PHY addresses used for the TBI must not collide with the external PHY addresses. Figure 2 shows the functional details of SGMII support on the MPC8313E processor.

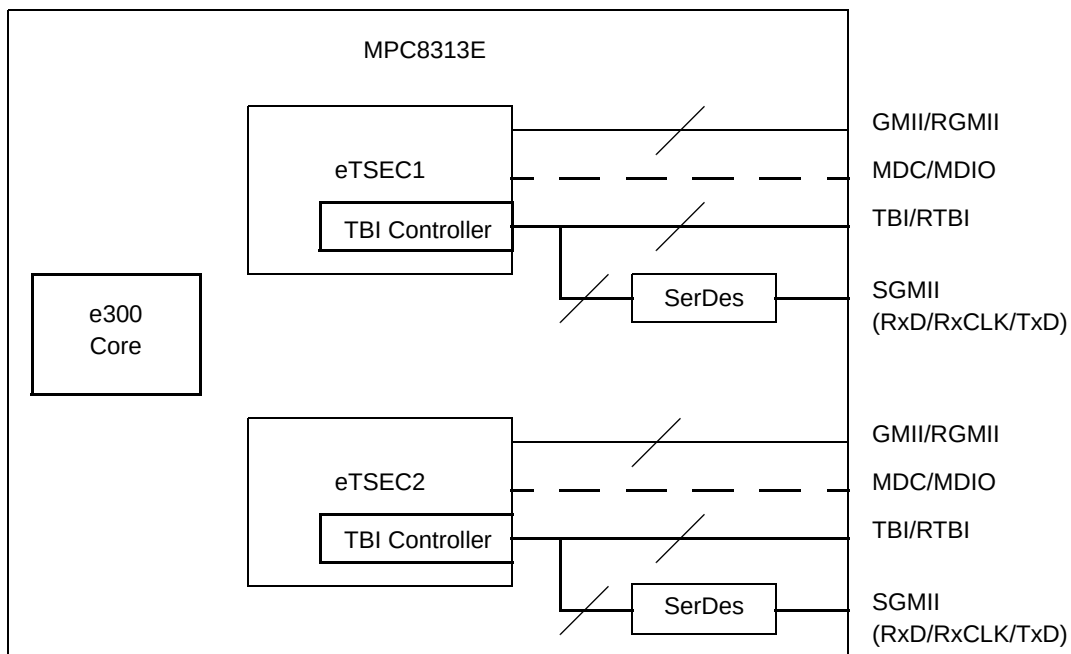


Figure 2. SGMII on MPC8313E

1 Configuring SGMII Mode on the MPC8313E

1.1 Selecting eTSEC Mode

At power-up, the MPC8313E processor reads the value of the reset configuration words (RCWs) to determine the operating mode of eTSEC 1 and 2. The corresponding mode bits should be configured to 0b110 to select SGMII mode. After sampling the RCWH (RCW - High Word) at reset, the corresponding eTSEC mode is programmed as per value in RCWH bits [16:18] for TSEC1 Mode and [19:21] for TSEC2 Mode and reflected in the respective ECNTRL (Ethernet Controller) register. The software configuration is next and is described in subsequent sections.

1.2 Program the SerDes to Select TBI

After selecting 10/100/1000 mode and half/full duplex mode operation in MACCFG1 and setting the primary MAC station address in MACSTNADDR1 and MACSTNADDR2 and the ECNTRL mode value (which is loaded at reset), the user software must program the TBI. A PHY address must be assigned to the TBI, which is controlled by the MDIO interface on the local eTSEC, just like any other external PHY. The address is configured in the TBIPA register. This value is left-shifted by 8 and ORed with the MII register offset. For example, if the value in the TBIPA register is 15 (0xF), the physical address for the TBI SR register becomes 0xF01. After the TBI physical address is assigned, the steps for programming the TBI are as follows:

1. Set up the clock speed for the MII management interface in the MIIMCFG register. Ensure that the MDC clock speed is not greater than 2.5 MHz (write value 0x0005).
2. Read the TBI control register (offset 0x00) to check whether auto negotiation is enabled and other information (default).
3. Program the TBICON register (offset 0x11) in single clock mode and with MII mode OFF to enable communication with the SerDes (write value 0x0020).
4. Program the TBI AutoNeg advertisement register (offset 0x04) to indicate to the link partner that TBI supports PAUSE and full duplex and does not support half duplex (write value 0x01A0).
5. Program the TBI control register (offset 0x00) to restart auto negotiation using the configuration in the previous step.
6. Read the TBI status register (offset 0x02) to check link status and whether auto negotiation is complete.

1.3 Program the External PHY

If another PHY, external to the chip is present, the same needs to be configured to select SGMII mode. The PHY is programmed according to the manufacturer's specification for selecting the relevant link mode and is beyond the scope of this document.

1.4 SGMII Register Initialization Sequence

Table 1 shows the steps of the SGMII mode initialization sequence.

Table 1. SGMII Mode Register Initialization Steps

Set Soft_Reset. MACCFG1[1000_0000_0000_0000_0000_0000_0000_0000]
Clear Soft_Reset. MACCFG1[0000_0000_0000_0000_0000_0000_0000_0000]
Initialize MACCFG2. MACCFG2[0000_0000_0000_0000_0111_0010_0000_0101] (I/F) Mode = 2, Full Duplex = 1 (Set I/F mode = 1 in SGMII 10/100 Mbps speed)
Initialize ECNTRL. ECNTRL[0000_0000_0000_0000_0001_0000_0010_0010] (This example has Statistics Enable = 1, TBIM = 1, SGMIIIM = 1) (Set R100M = 1 in SGMII 100 Mbps speed)
Initialize MAC Station Address. MACSTNADDR [0110_0000_0000_0010_0000_0000_0000_0000] to 02608C: 876543, for example.
Assign a Physical address to the TBI. TBIPA[0000_0000_0000_0000_0000_0000_0001_0000] Set to 16, for example.
Set up the MII management clock speed. MIIMCFG[0000_0000_0000_0000_0000_0000_0000_0101] set source clock divide by 14 for example to insure that MDC clock speed is not greater than 2.5 MHz
Read the MII management Indicator register and check for Busy = 0, MIIMIND ---> [0000_0000_0000_0000_0000_0000_0000_0000] This indicates that the eTSEC MII management bus is idle.
Set up the MII management for a write cycle to the TBICON register (write the PHY address and register address) MIIMADD[0000_0000_0000_0000_0001_0000_0001_0001] The TBICON register is at offset address 0x11 from the TBI address.
Perform an MII management write cycle to TBI Write to MII management control with 16-bit data intended for the TBICON register. MIIMCON[0000_0000_0000_0000_0000_0000_0010_0000] This sets TBI in single-clock mode and MII mode off to enable communication with SerDes.
Read the MII management indicator register and check for Busy = 0, MIIMIND ---> [0000_0000_0000_0000_0000_0000_0000_0000] This indicates that the write cycle is complete.
Set up the MII management for a write cycle to the TBI AN advertisement register (write the PHY address and register address). MIIMADD[0000_0000_0000_0000_0001_0000_0000_0100] The AN advertisement register is at offset address 0x04 from the TBI address.
Check to see if the MII management write is complete. Read the MII management indicator register and check for Busy = 0. MIIMIND ---> [0000_0000_0000_0000_0000_0000_0000_0000] This indicates that the write cycle is complete.
Set up the MII management for a write cycle to the TBI control register (write the PHY address and register address). MIIMADD[0000_0000_0000_0000_0001_0000_0000_0000] The control register is at offset address 0x00 from the TBI address.

Table 1. SGMII Mode Register Initialization Steps (continued)

Perform an MII management write cycle to TBI. Write to MII management control with 16-bit data intended for the TBI control register. MIIMCON[0000_0000_0000_0000_0001_0010_0000_0000] This enables the TBI to restart auto-negotiations using the configuration set in the AN advertisement register.
Check to see if MII management write is complete. Read the MII management Indicator register and check for Busy = 0. MIIMIND ---> [0000_0000_0000_0000_0000_0000_0000_0000] This indicates that the write cycle is complete.
Check to see if the PHY has completed auto-negotiations. Set up the MII management for a read cycle to the PHY MII management register (write the PHY address and register address). MIIMADD[0000_0000_0000_0000_0001_0000_0000_0001] The PHY status control register is at address 0x1 and in this case the PY address is 0x10.
Perform an MII management read cycle of status register, AN expansion register, and so on.
Clear IEVENT register. IEVENT[0000_0000_0000_0000_0000_0000_0000_0000]
Initialize (Empty) transmit descriptor ring and fill buffers with data. Initialize TBASE0 –TBASE7 TBASE0 – TBASE7[LLLL_LLLL_LLLL_LLLL_LLLL_LLLL_LLLL_L000]
Initialize (Empty) receive descriptor ring and fill with empty buffers. Initialize RBASE0 –RBASE7, RBASE0 – RBASE7[LLLL_LLLL_LLLL_LLLL_LLLL_LLLL_LLLL_L000]
Enable transmit and receive queues
Enable Rx and Tx. MACCFG1[0000_0000_0000_0000_0000_0000_0000_0101]

2 Example of Test Setup and Code

The example setup for testing SGMII mode configuration was developed on the Freescale MPC8313E MDS board running Linux 2.6.11 kernel. The initial level configuration for eTSEC operating mode is selected through the jumper switches SW7[1..6](indicating TSEC1M and TSEC2M) on the board. It is ensured beforehand that FCFG bit (Flash/BCSR configuration selection bit) is set to load the reset configuration word (RCW) from the board control and status registers (BCSR) instead of flash memory. At power-on reset, the switch value is read and programmed in the corresponding eTSEC mode bits in RCWH. Next is software initialization, the code for which is integrated with the ethernet driver and is described in subsequent sections. PHY configuration is not required on the MPC8313E MDS board because the switch settings are also carried over to the External PHY pins HWCFG[3:0], which select the PHY interface mode (SGMII/GMII/RGMII etc). The PHY used in the example test setup is Marvell 88E111.

2.1 Code

The Linux 2.6.11 kernel for the MPC8313E uses the gianfar Ethernet driver to initialize the eTSEC and also call the PHY driver initialization routines. In the gfar_enet_open function, ECNTRL mode bits are checked to see if SGMII is enabled. If it is enabled, gfar_configure_serdes is called to perform the

programming steps defined in [Section 1.2, “Program the SerDes to Select TBI.”](#) It uses new read/write routines to write to the MII registers mapped on the local eTSEC MDIO bus. Also, some extra hash-defines are added to `gianfar.h`.

The `drivers/net/gianfar.h` file contains the common `#define` used by the SGMII code as listed here:

```
/* TBI register addresses (not defined in linux/mii.h) */
#define MII_TBICON0x11
/* TBICON register bit fields */
#define TBICON_CLK_SELECT0x0020
#define ECNTRL_SGMII_MODE0x00000002
```

The `drivers/net/gianfar.c` file is the main gianfar driver code file. The `init_phy` routine checks whether the programmed mode in ECNTRL is SGMII. If it is SGMII, then `gfar_configure_serdes` is called to initialize the TBI interface and program it to select SERDES, as follows:

```
u32 ecntrl_val;

/* SGMII_SUPPORT */

ecntrl_val = gfar_read(&priv->regs->ecntrl);

if ((ecntrl_val & ECNTRL_SGMII_MODE) && (ecntrl_val & ECNTRL_TBI_MODE))
    gfar_configure_serdes(dev);
}
```

The `gfar_configure_serdes` routine is defined as follows:

```
static void gfar_configure_serdes(struct net_device *dev)
{
    struct gfar_private *priv = netdev_priv(dev);
    struct gfar_mii __iomem *regs = (void __iomem *)&priv->regs->gfar_mii_regs;
    u16 value;

    /* Intialise TBI i/f to communicate with serdes(lynx phy) */
    /* Write TBICON(0x11) = 0x20. Single clk mode, mii mode off(for serdes communication) */
    gfar_local_mdio_write(regs, TBIPA_VALUE, MII_TBICON, TBICON_CLK_SELECT);

    /* Write TBI AN(0x04) = 0x1a0. Supported pause and full-duplex, no half-duplex */
    gfar_local_mdio_write(regs, TBIPA_VALUE, MII_ADVERTISE, ADVERTISE_1000XFULL |
ADVERTISE_1000XPAUSE | ADVERTISE_1000XPSE_ASYM);

    /* Write TBI Control(0x00) = 0x1340. ANEG enable, restart ANEG, full duplex mode,
speed[1] set */
    gfar_local_mdio_write(regs, TBIPA_VALUE, MII_BMCR, BMCR_ANENABLE | BMCR_ANRESTART |
BMCR_FULLDPLX | BMCR_SPEED1000);
}
```

In `drivers/net/gianfar_mii.c` routines are added to read and write on the eTSEC local MDIO interface, which are required for programming the corresponding TBI controller:

```
/* Write value to the PHY at mii_id at register regnum,
```

```

* on the bus attached to the local interface, which may be different from the
* generic mdio bus (tied to a single interface), waiting until the write is
* done before returning. This is helpful in programming interfaces like
* the TBI which control interfaces like onchip SERDES and are always tied to
* the local mdio pins, which may not be the same as system mdio bus, used for
* controlling the external PHYs, for example.
*/
int gfar_local_mdio_write(struct gfar_mii *regs, int mii_id, int regnum, u16 value)
{
    /* Set the PHY address and the register address we want to write */
    gfar_write(&regs->miimadd, (mii_id << 8) | regnum);
    /* Write out the value we want */
    gfar_write(&regs->miimcon, value);
    /* Wait for the transaction to finish */
    while (gfar_read(&regs->miimind) & MIIMIND_BUSY)
        cpu_relax();
    return 0;
}

/* Read the bus for PHY at addr mii_id, register regnum, and
* return the value. Clears miimcom first. All PHY
* Operation done on the bus attached to the local interface,
* which may be different from the generic mdio bus
* This is helpful in programming interfaces like
* the TBI which, in turn, control interfaces like onchip SERDES
* and are always tied to the local mdio pins, which may not be the
* same as system mdio bus, used for controlling the external PHYs, for example.
*/
int gfar_local_mdio_read(struct gfar_mii *regs, int mii_id, int regnum)
{
    u16 value;
    /* Set the PHY address and the register address we want to read */
    gfar_write(&regs->miimadd, (mii_id << 8) | regnum);
    /* Clear miimcom, and then initiate a read */
    gfar_write(&regs->miimcom, 0);
    gfar_write(&regs->miimcom, MII_READ_COMMAND);

```

Conclusion

```
/* Wait for the transaction to finish */  
while (gfar_read(&regs->miimind) & (MIIMIND_NOTVALID | MIIMIND_BUSY))  
    cpu_relax();  
/* Grab the value of the register from miimstat */  
value = gfar_read(&regs->miimstat);  
return value;  
}
```

2.2 Test Setup

The simple test setup consists of an MPC8313E MDS board connected to a Linux host. Port 2 of the MDS board, which is designed to operate in SGMII mode, is connected to the Ethernet interface on the Linux host. See [Figure 3](#). A ping from the board to the Linux host IP address indicates proper working of the SGMII. Throughput can be tested by connecting a commercially available traffic generator (such as Smartbits™) to both the ports on the MDS board. The board is configured to operate in SGMII mode, and traffic is routed from one of the traffic generator's ports to the other through the board.

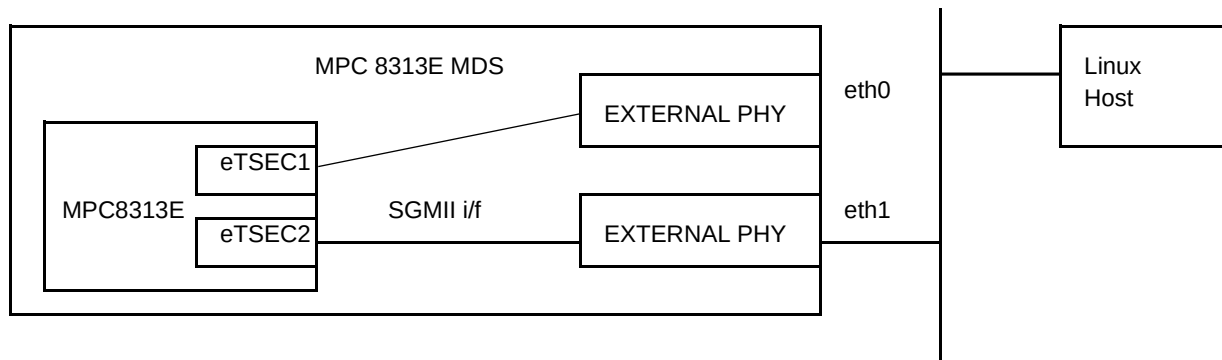


Figure 3. SGMII Connectivity with PHY

3 Conclusion

SGMII on the MPC8313E processor supports a minimal pin interface with compatible PHYs and the lowest pin count of all the available interfaces. The same interface can be configured to work in 10/100/1000 mode. It can support optical/copper line terminations through compatible PHY's as well as act as a serial communication link for intra and inter board communications (through backplane) without any additional interfacing.

4 Reference

1. MPC8313E *PowerQUICC™ II Pro Integrated Host Processor Reference Manual*, available at the Freescale web site.
2. MPC8313E *EMDS Processor Board User Manual*, available at the Freescale web site.
3. MPC8313E *Linux BSP User Manual*, available with the Freescale's BSP distribution for the MPC8313E MDS board.

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

How to Reach Us:

Home Page:

www.freescale.com

Web Support:

<http://www.freescale.com/support>

USA/Europe or Locations Not Listed:

Freescale Semiconductor, Inc.
Technical Information Center, EL516
2100 East Elliot Road
Tempe, Arizona 85284
+1-800-521-6274 or
+1-480-768-2130
www.freescale.com/support

Europe, Middle East, and Africa:

Freescale Halbleiter Deutschland GmbH
Technical Information Center
Schatzbogen 7
81829 Muenchen, Germany
+44 1296 380 456 (English)
+46 8 52200080 (English)
+49 89 92103 559 (German)
+33 1 69 35 48 48 (French)
www.freescale.com/support

Japan:

Freescale Semiconductor Japan Ltd.
Headquarters
ARCO Tower 15F
1-8-1, Shimo-Meguro, Meguro-ku
Tokyo 153-0064
Japan
0120 191014 or
+81 3 5437 9125
support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor Hong Kong Ltd.
Technical Information Center
2 Dai King Street
Tai Po Industrial Estate
Tai Po, N.T., Hong Kong
+800 2666 8080
support.asia@freescale.com

For Literature Requests Only:

Freescale Semiconductor
Literature Distribution Center
P.O. Box 5405
Denver, Colorado 80217
+1-800 441-2447 or
+1-303-675-2140
Fax: +1-303-675-2150
LDCForFreescaleSemiconductor@hibbertgroup.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters which may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. The Power Architecture and Power.org word marks and the Power and Power.org logos and related marks are trademarks and service marks licensed by Power.org. All other product or service names are the property of their respective owners.

© Freescale Semiconductor, Inc., 2007. All rights reserved.

